

KEY #	ITEM #	DESCRIPTION	DESCRIPTION	955-24	955-27	955-44	955-47	955-74	955-77	955-94	955-97
	S21255	WASHER	RONDELLE	3	2	3	2	3	2	3	2
86.	Y-12656	PLUG - BUTTON	BOUCHON	2	2	2	2	2	2	2	2
87.	Y-11793	NUT - 1/4	ECROU - 1/4	14	14	14	14	14	14	14	14
88.	Y-11598	NUT WING - 1/4	ECROU PAPILLON - 1/4	19	18	19	18	19	18	19	18
89.	Y-11212	NUT TINNEMAN - 1/4	ECROU TINNEMAN - 1/4	6	6	6	6	6	6	6	6
90.	Y-11211	LOCK WASHER	RONDELLE / DE BLOCAGE	4	4	4	4	4	4	4	2
97.	10240-13	WHEEL BOLT	ROUE BOULON	2	2	2	2	2	2	2	2
98.	S21124	SCREW - 8 X 1/2	VIS - 8 X 1/2	22	22	18	18	22	22	20	20
99.	Y-12646	SCREW - SHOULDER	VIS	4	4	4	4	4	4	4	4
101.	Y-12853	WASHER - #8	RONDELLE - #8	4	4	4	4	4	4	4	4
104	Y- 12835	SCREW 6-32 X 1/4	VIS - 6-32 X 1/4	*	*	5	5	*	*	5	5
105.	Y-29307	NUT - 10:24	ECROU - 10:24	*	*	5	5	*	*	5	5
108.	PB20-60	LID HANDLE	POIGNEE	*	*	1	1	*	*	1	1
109.	S21136	SCREW - 8-32 X 3/8	VIS - 8-32 X 3/8	*	*	2	2	*	*	2	2
110.	10225-T10	GRID	GRILLE	*	*	1	1	*	*	1	1
111.	10390-T10	SIDE BURNER	BRULEUR DE COTE	*	*	1	1	*	*	1	1
113.	10342-T08	ELECTRODE - SIDE BURNER	ELECTRODE - BRULEUR DE COTE	*	*	1	1	*	*	1	1
114.	10393-K40	COVER - SIDE BURNER	COUVERCLE LATÉRAL	*	*	1	1	*	*	1	1
115.	Y-29305	BOLT - 10:24 X 3/8	BOULON - 10:24 X 3/8	2	2	8	8	4	4	8	8
117.	10393-K50	SHELF-SIDE BURNER	SUPPORT DE BRULEUR DE COTE	*	*	1	1	*	*	1	1
118.	10393-T221	SHIELD-SIDE BURNER	ECRAN DE CUVETTE LATÉRAL	*	*	1	1	*	*	1	1
120.	S15117	GREASE PAN HOLDER	PORTE CONTENANT À GRAISSE	1	1	1	1	1	1	1	1
121.	S15118	GREASE PAN	CUVETTE À GRAISSE	1	1	1	1	1	1	1	1
122.	S15115	GREASE PAN - DISPOSABLE	CUVETTE À GRAISSE - J'ETABLE	2	2	2	2	2	2	2	2
123.	10184-D60	CASTER INSERT	EMBOUT POUR ROULETTE	2	2	2	2	2	2	2	2