

KEY #	ITEM #	DESCRIPTION	DESCRIPTION	#58-24	#58-04	#59-24	#59-04	#818-4	#848-4	#88-24	#88-44	#88-74	#88-04
				#58-27	#58-07	#59-27	#59-07	#818-7	#848-7	#88-27	#88-47	#88-77	#88-07
31.	10184-K651	CONTROL COVER	PANNEAU DE CONTROLE	1	1	1	1	1	1	1	1	1	1
33.	10184-R801	RADIATION SHIELD	ÉCRAN DE CHALEUR	1	1	1	1	1	1	1	1	1	1
35.	10184-K651	SUPPORT-CASTING-LEFT	SUPPORT GAUCHE DU FOYER	1	1	1	1	1	1	1	1	1	1
36.	10184-K661	SUPPORT-CASTING-RIGHT	SUPPORT DROIT DU FOYER	1	1	1	1	1	1	1	1	1	1
37.	10184-R581	SUPPORT-SIDE SHELF-LEFT	SUPPORT TABLETTE DE GAUCHE	2	2	2	2	2	2	2	2	2	2
38.	10184-R591	SUPPORT-SIDE SHELF-RIGHT	SUPPORT TABLETTE DE DROIT	2	2	2	2	2	2	2	2	2	2
39.	10958-K831	BRACE-REAR	SUPPORT ARRIERE	1	1	1	1	1	1	1	1	1	1
40.	10958-K811	BASE	TABLETTE INFERIEURE	1	1	1	1	1	1	1	1	1	1
41.	10958-K851	BRACE-FRONT	SUPPORT AVANT	1	1	1	1	1	1	1	1	1	1
42.	10958-K881	FRONT PANEL BLK	PANNEAU AVANT	1	1	-	-	1	1	-	-	-	-
	10958-K89	FRONT PANEL SS	PANNEAU AVANT	-	-	1	1	-	-	1	1	1	1
43.	10958-K861	SIDE PANEL BLK	PANNEAU LATERALE	2	2	-	-	2	2	-	-	-	-
	10958-K87	SIDE PANEL SS	PANNEAU LATERALE	-	-	2	2	-	-	2	2	2	2
47.	10184-K19A	TANK RETAINER	SERVITEUR DU RESERVOIR	2	2	2	2	2	2	2	2	2	2
50.	10711-K561	SHELF-SIDE-RIGHT	PLANCHETTE LATERALE – DROIT	1	1	1	1	1	1	1	1	1	1
51.	10711-K562	SHELF-SIDE-LEFT	PLANCHETTE LATERALE – GAUCHE	1	-	1	-	1	-	1	-	1	-
	10711-K563	SHELF-SIDEBURNER	PLANCHETTE – BRULEUR DE COTE	-	1	-	1	-	1	-	1	-	1
56.	10892-8	WHEEL	ROUE	2	2	2	2	2	2	2	2	2	2
65.	S13005	BURNER ROTISSERIE	BRULEUR A ROTISS	-	-	-	-	-	1	-	-	1	1
	S13009	BURNER ROTISSERIE	BRULEUR A ROTISS	-	1	-	1	-	-	-	-	-	-
68.	S21362	SPRING	RESSORT	-	1	-	1	-	1	-	-	1	1
70.	Y-11990	HEX NUT	ECROU	-	1	-	1	-	1	-	-	1	1
71.	10696-109	REARBURNER-ORIFICE LP	ORIFICE DU BRULEUR ARRIERE PL	-	1	-	1	-	1	-	-	1	1
	10696-160	REARBURNER-ORIFICE NG	ORIFICE DU BRULEUR ARRIERE GN	-	1	-	1	-	1	-	-	1	1
73.	S21420	PUSH NUT	POUSSE ECROU	2	2	2	2	2	2	2	2	2	2
74.	Y-6616	BOLT 1/4-20 X 1 1/2	BOULON – 1/4-20 X 1 1/2	2	2	2	2	2	2	2	2	2	2
75.	10338-145	HANDLE	POIGNEE	2	2	2	2	2	2	2	2	2	2
76.	10239-6	WASHER-HANDLE	RONDELLE DE LA POIGNEE	2	2	2	2	2	2	2	2	2	2
78.	10892-14	CASTOR	ROULETTES	2	2	2	2	2	2	2	2	2	2
79.	Y-11545	SCREW – 1/4-20 X 1 3/8	VIS – 1/4-20 X 1 3/8	4	4	4	4	4	4	4	4	4	4
80.	Y-11546	SCREW- 1/4-20 X 1 7/8	VIS – 1/4-20 X 1 7/8	8	8	8	8	8	8	8	8	8	8
81.	S21017	BOLT – 1/4-20 x 1 3/4	BOULON - 1/4-20 X 1 3/4	2	2	2	2	2	2	2	2	2	2
82.	Y-12860	SCREW 1/4-20 X 1	VIS – 1/4-20 X 1	18	18	18	18	18	18	18	18	18	18
83.	S21014	BOLT- 1/4-20 X 3/4	BOULON – 1/4-20 X 3/4	6	6	6	6	6	6	6	6	6	6
84.	S15178	AXEL	ESSIEU	1	1	1	1	1	1	1	1	1	1
87.	Y-11793	NUT- 1/4-20	ECROU – 1/4-20	24	24	24	24	24	24	24	24	24	24
88.	Y-11598	NUT-WING – 1/4-20	ECROU-PAPILLON – 1/4-20	2	2	2	2	2	2	2	2	2	2
90.	Y-12286	LAG-BOLT - 5-16 X 4	BOULON-LAG - 5-16 X 4	4	4	4	4	4	4	4	4	4	4
98.	S21124	SCREW – 8 X 1/2	VIS - 8 X 1/2	34	34	34	34	34	34	34	34	34	34
99.	Y-12646	SCREW – SHOULDER 8 X 1/2	VIS - 8 X 1/2	-	2	-	2	-	2	-	2	-	2
104.	Y-12835	SCREW – 6-32 X 1/4	VIS – 6-32 X 1/4	-	4	-	4	-	4	-	4	-	4
105.	Y-29307	NUT – 10-24	ECROU – 10-24	-	4	-	4	-	4	-	4	-	4
108.	PB20-60	LID HANDLE	POIGNEE	-	1	-	1	-	1	-	1	-	1
109.	S21136	SCREW – 8-32 X 3/8	VIS – 8-32 X 3/8	2	4	2	4	2	4	2	4	2	4
110.	10225-T10	GRID	GRILLE	-	1	-	1	-	1	-	1	-	1
111.	10390-E10	SIDE BURNER	BRULEUR DE COTE	-	1	-	1	-	1	-	1	-	1
113.	10342-T14	ELECTRODE – SIDE BURNER	ELECTRODE – BRULEUR DE COTE	-	1	-	1	-	1	-	1	-	1
114.	10393-K40	COVER-SIDE BURNER	COUVERCLE LATÉRAL	-	1	-	1	-	1	-	1	-	1
115.	Y-29305	SCREW – 10-24 X 3/8	VIS– 10-24 X 3/8	2	8	2	8	2	8	2	8	2	8
117.	10393-R50	SHELF-SIDE BURNER	SUPPORT DE BRULEUR DE COTE	-	1	-	1	-	1	-	1	-	1
121.	10184-K643	CASTOR SUPPORT	SUPPORT DE ROULETTE	1	1	1	1	1	1	1	1	1	1
123.	S15115	GREASE PAN - DISPOSABLE	CUVETTE A GRAISSE	2	2	2	2	2	2	2	2	2	2