


PARTS LIST/LISTE DE PIÉCES

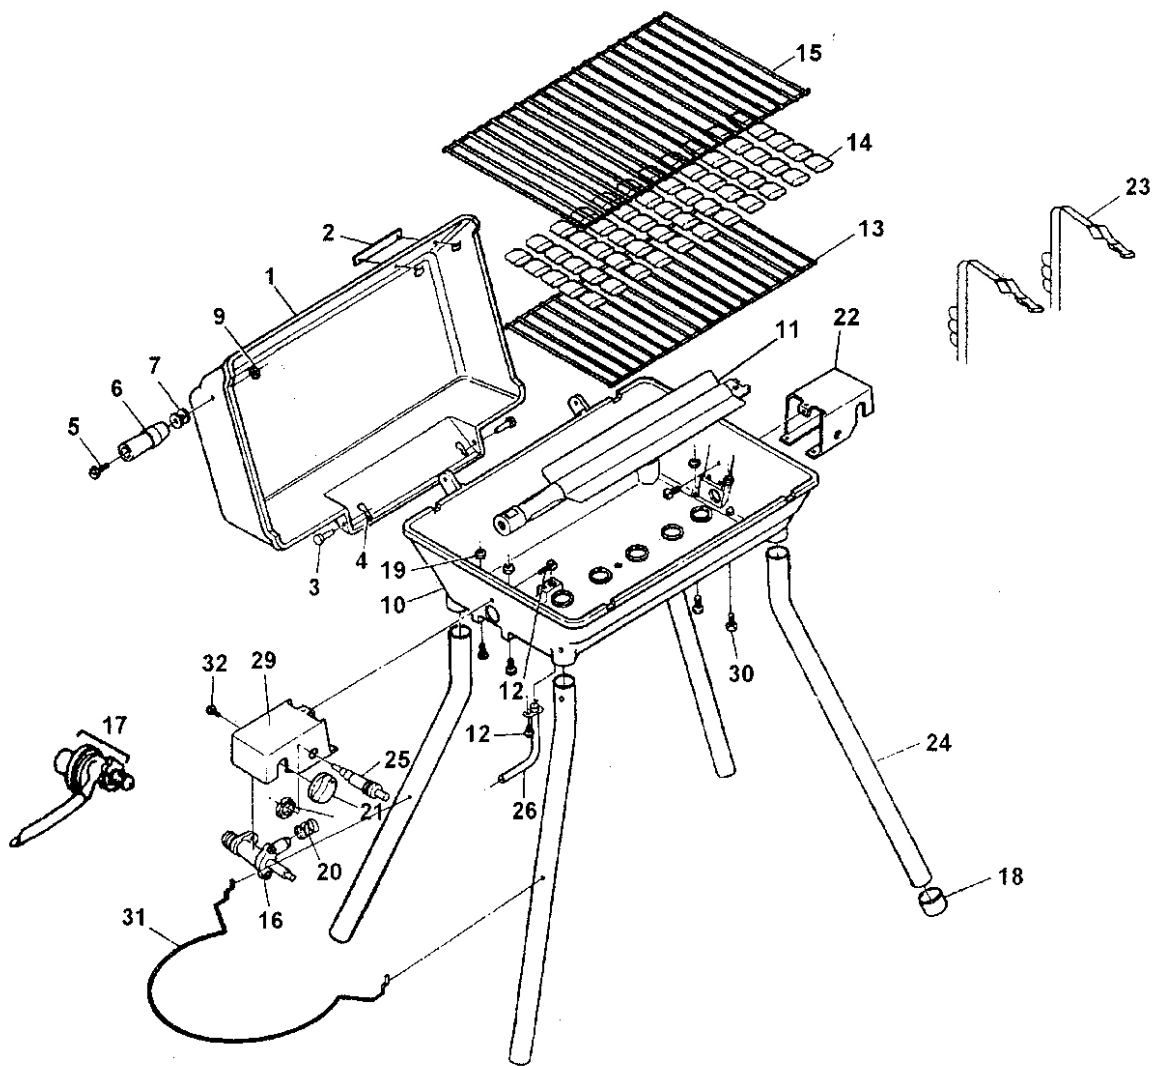

KEY									KEY							
NO.	ITEM #	102-2	102-3	102-4	512-2	512-3	512-4		NO.	ITEM #	102-2	102-3	102-4	512-2	512-3	512-4
1.	S11350	1	1	1	1	1	1		17.	10114-17	•	•	1	•	•	1
2.	S14016	1	1	1	1	1	1			10153-40	•	1	•	•	1	•
3.	S21235	2	2	2	2	2	2			S10702	1	•	•	1	•	•
4.	S21233	2	2	2	2	2	2		18.	Y-12658	4	4	4	4	4	4
5.	Y-11549	1	1	1	1	1	1		19.	Y-29307	4	4	4	4	4	4
Handle	6.	10338-143	1	1	1	1	1		20.	S21360	1	1	1	1	1	1
	7.	10239-5	1	1	1	1	1		21.	10472-K36 Knob	1	1	1	1	1	1
Burner	9.	Y-11793	1	1	1	1	1		22.	10086-T12	•	•	1	•	•	1
	10.	S11361	1	1	1	1	1			10086-T12EU	1	1	•	1	1	•
Grid	11.	10390-T20	•	•	1	•	•	1	23.	10184-K17	2	2	2	2	2	2
		10390-T20E	1	1	•	1	1	•	24.	10338-T201	4	4	4	4	4	4
Grid	12.	S21123	3	3	3	3	3		25.	10342-21 Ignitor	1	1	1	1	1	1
	13.	S12041	1	1	1	•	•	•	26.	S15506	1	1	1	1	1	1
Grid		10010-45	•	•	•	1	1	1	28.	Y-12659	4	4	4	4	4	4
	14.	10010-33	•	•	1	•	•	1	29.	10194-T201	2	2	2	2	2	2
		10010-8	1	1	•	1	1	•	30.	Y-29306	4	4	4	4	4	
	15.	S12004	1	1	1	1	1	1	31.	10184-T16	1	1	1	1	•	
	16.	10440-T12	•	•	1	•	•	1	32.	Y-20709	1	1	1	1	1	1
		10440-T12E	•	1	•	•	1	•								
		10440-T12D	1	•	•	1	•	•								