

PARTS LIST/LISTE DES PIECES

KEY #	ITEM #	DESCRIPTION	DESCRIPTION	941-24	941-44	951-24	951-44	951-74	951-94
				941-27	941-47	951-27	951-47	951-77	951-97
1.	10909-T32	CASTING BOTTOM	FOND DU FOYER	1	1	•	•	•	•
	10909-T42	CASTING BOTTOM	FOND DU FOYER	•	•	1	1	1	1
2.	10473-T32	CASTING TOP	COUVERCLE DU GRIL	1	1	•	•	•	•
	10473-T42	CASTING TOP	COUVERCLE DU GRIL	•	•	1	1	1	1
3.	10081-BK32	NAMEPLATE	PLAQUE D'IDENTIFICATION	1	1	•	•	•	•
	10081-BK426	NAMEPLATE	PLAQUE D'IDENTIFICATION	•	•	1	1	•	•
	10081-BK422	NAMEPLATE	PLAQUE D'IDENTIFICATION	•	•	•	•	1	1
5.	S15156	HEAT INDICATOR	INDICATEUR DE CHALEUR	1	1	1	1	1	1
7.	S21233	HINGE CLIP	ATTACHE DE CHEVILLE	2	2	2	2	•	•
8.	10222-T32	GRATE	GRILL POUR BRIQUETTES	1	1	•	•	•	•
	10222-T42	GRATE	GRILL POUR BRIQUETTES	•	•	1	1	1	1
9.	10225-T326	GRID - CAST IRON	GRILLE	2	2	•	•	•	•
	10225-T426	GRID - CAST IRON	GRILLE	•	•	2	2	2	2
11.	10225-T327	GRID RETRACTABLE	GRILLE RETRACTABLE	1	1	•	•	•	•
	10225-T428	GRID RETRACTABLE	GRILLE RETRACTABLE	•	•	1	1	1	1
14.	10010-45	BRIQUETS - CERAMIC	BRIQUETTES - CERAMIQUE	1	1	•	•	•	•
	10010-55	BRIQUETS - CERAMIC	BRIQUETTES - CERAMIQUE	•	•	1	1	1	1
15.	10390-T401	BURNER ASSY	ENSEMBLE DE BRULEUR	1	1	•	•	•	•
	10390-T501	BURNER ASSY	ENSEMBLE DE BRULEUR	•	•	1	1	1	1
17.	10342-21	IGNITOR	ALLUMEUR	1	•	1	•	1	•
	10342-22	IGNITOR	ALLUMEUR	•	1	•	1	•	1
18.	S15504	ELECTRODE	ELECTRODE	1	1	1	1	1	1
21.	10440-K40	CONTROL ASSY LP	SOUPAPE, (GAZ PROPANE)	1	•	•	•	•	•
	10440-K41	CONTROL ASSY NG	SOUPAPE, (GAZ NATUREL)	1	•	•	•	•	•
	10440-K42	CONTROL ASSY LP	SOUPAPE, (GAZ PROPANE)	•	1	•	•	•	•
	10440-K43	CONTROL ASSY NG	SOUPAPE, (GAZ NATUREL)	•	1	•	•	•	•
	10440-K50	CONTROL ASSY LP	SOUPAPE, (GAZ PROPANE)	•	•	1	•	•	•
	10440-K51	CONTROL ASSY NG	SOUPAPE, (GAZ NATUREL)	•	•	1	•	•	•
	10440-K52	CONTROL ASSY LP	SOUPAPE, (GAZ PROPANE)	•	•	•	1	•	•
	10440-K53	CONTROL ASSY NG	SOUPAPE, (GAZ NATUREL)	•	•	•	1	•	•
	10440-K58	CONTROL ASSY LP	SOUPAPE, (GAZ PROPANE)	•	•	•	•	•	1
	10440-K59	CONTROL ASSY NG	SOUPAPE, (GAZ NATUREL)	•	•	•	•	•	1
	10440-K62	CONTROL ASSY LP	SOUPAPE, (GAZ PROPANE)	•	•	•	•	1	•
	10440-K63	CONTROL ASSY NG	SOUPAPE, (GAZ NATUREL)	•	•	•	•	1	•
21A.	S10125	HOSE - SIDE BURNER LP	TUYAU DU BRULEUR LATERAL PL	•	1	•	1	•	1
	S10126	HOSE - SIDE BURNER NG	TUYAU DE BRULEUR LATERAL GN	•	1	•	1	•	1
21B.	S10133	HOSE - REARBURNER LP	TUYAU DE BRULEUR ARRIERE PL	•	•	•	•	1	•
	S10139	HOSE - REARBURNER NG	TUYAU DE BRULEUR ARRIERE GN	•	•	•	•	1	•
	S10134	HOSE - REARBURNER LP	TUYAU DE BRULEUR ARRIERE PL	•	•	•	•	•	1
	S10140	HOSE - REARBURNER NG	TUYAU DE BRULEUR ARRIERE GN	•	•	•	•	•	1
22.	10114-20	HOSE & REGULATOR LP - QCC1	TUYAU ET REGULATEUR PL - QCC1	1	1	1	1	1	1
	10111-K47	HOSE NATURAL GAS	TUYAU (GAZ NATUREL)	1	1	1	1	1	1
23.	10472-K36	CONTROL KNOB	BOUTON DE CONTROLE	2	3	2	3	3	4
30.	10086-K401	DECO PLATE	PLAQUE DECORATIVE	1	•	•	•	•	•
	10086-K411	DECO PLATE	PLAQUE DECORATIVE	•	1	•	•	•	•
	10086-K501	DECO PLATE	PLAQUE DECORATIVE	•	•	1	•	•	•
	10086-K511	DECO PLATE	PLAQUE DECORATIVE	•	•	•	1	•	•
	10086-K521	DECO PLATE	PLAQUE DECORATIVE	•	•	•	•	•	1
	10086-K531	DECO PLATE	PLAQUE DECORATIVE	•	•	•	•	1	•
31.	10194-K401	CONTROL COVER	PANNEAU DE CONTROLE	1	1	•	•	•	•
	10194-K501	CONTROL COVER	PANNEAU DE CONTROLE	•	•	1	1	1	1
32.	10338-K561	POST LEG	PIEDS	2	2	2	2	•	•
33.	10338-K571	POST WHEEL	PIEDS DE ROUE	2	2	2	2	4	4
35.	10184-K561	SUPPORT - CASTING - LEFT	SUPPORT GAUCHE DU FOYER	1	1	1	1	1	1
36.	10184-K571	SUPPORT - CASTING - RIGHT	SUPPORT DROIT DU FOYER	1	1	1	1	1	1
37.	10184-K581	SUPPORT - SIDE SHELF - LEFT	SUPPORT TABLETTE DE GAUCHE	2	2	2	2	2	2
38.	10184-K591	SUPPORT - SIDE SHELF - RIGHT	SUPPORT TABLETTE DE DROITE	2	2	2	2	2	2
39.	10956-K401	BRACE - UPPER REAR	SUPPORT ARRIERE	1	1	•	•	•	•
	10956-K501	BRACE - UPPER REAR	SUPPORT ARRIERE	•	•	1	1	1	1